


2.0 P.S. REMOTE SHOCK EXPLODED VIEW DIAGRAM

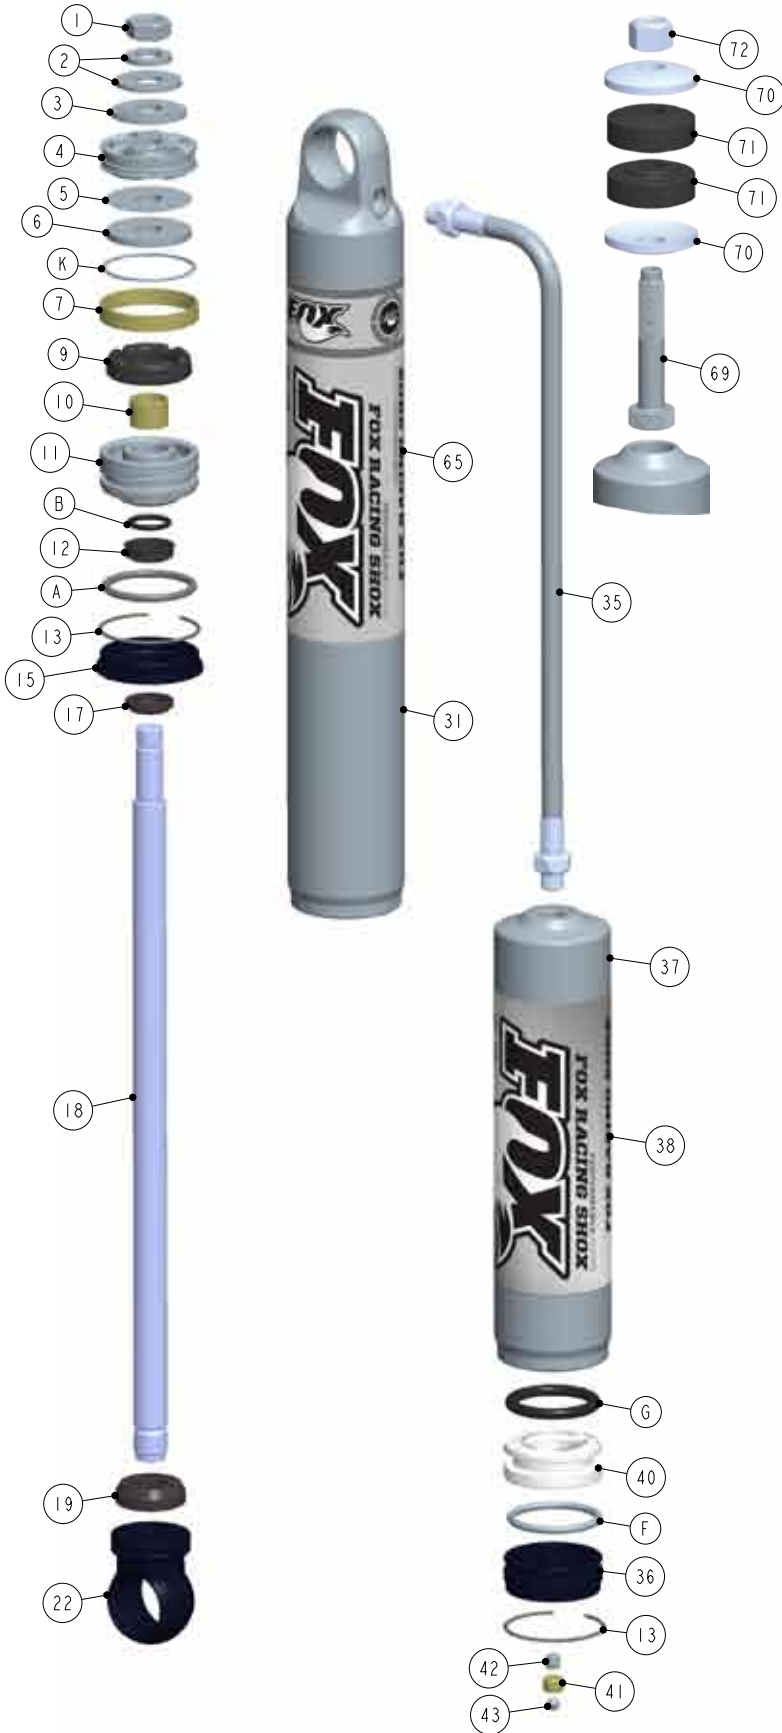

PARTS

#	DESCRIPTION	#	DESCRIPTION
1	Piston Lock Nut	38	Reservoir Decal
2	Back-Up Washer	39	IFP Valve Cap
3	Rebound Valve Stack	40	IFP
4	Damping Piston	41	Air Valve Housing
5	Compression Valve Stack	42	Air Valve Core
6	Top-Out Washer	43	Piggy Back Bridge
7	Damping Piston Wear Band	44	Piggy Back Lock Ring
8	Shaft Spacer	45	Piggy Back Bridge Bolt
9	Top-Out Bumper	46	Air Shock Spring
10	Internal Bearing	47	Spring Retainer Adapter
11	Bearing Housing	48	Bump Stop Pad Nut
12	Bearing U-Cup Seal	49	Bump Stop Pad Bolt
13	Retaining Ring	50	Bump Stop Pad
14	Spring Guide Retainer	51	Bypass Reservoir Fitting
15	Bearing Cap	52	Bypass Tube
16	Bearing Set Screw	53	Bypass Piston
17	Bearing Cap Wiper Seal	54	Bypass Spring
18	Shaft	55	Bypass Plunger
19	Bottom-Out Bumper	56	Bypass End Cap
20	Spring Retainer	57	Adjustment Screw
21	Spring Retainer Clip	58	Adjustment Screw Lock Nut
22	Eyelet	59	Reducer Bushing
23	Eyelet Spacer/Reducer	60	Internal Body
24	Eyelet Retaining Ring	61	Internal Bypass Valve Stack Nut
25	Spherical Bearing	62	Internal Bypass Valve Stack
26	Body Cap	63	Eyelet Bushing
27	Preload Back-Up Ring	64	Eyelet Sleeve
28	Preload Ring	65	Eyelet Bar Pin
29	Crossover Ring	66	Stem
30	Crossover Ring Set Screw	67	Stem mount washer
31	Body	68	Stem mount bushing
32	Spring Divider	69	Stem mount nut
33	Spring Guide		
34	Reservoir Hose Adapter		
35	Remote Reservoir Hose		
36	Reservoir End Cap		
37	Reservoir		

O-RINGS

#	DESCRIPTION
A	Bearing Housing
B	Shaft Bearing
C	Spring Retainer
D	Body Cap
E	Air Valve Housing
F	Reservoir End Cap
G	IFP
H	Piggy Back Bridge
I	Piggy Back Bridge Port
J	Ø 1.25 Shaft Bottom-Out Bumper
K	Piston

