


BORGESON

Steering You Forward

#802402 SBC/LWP P/S Pump Bracket

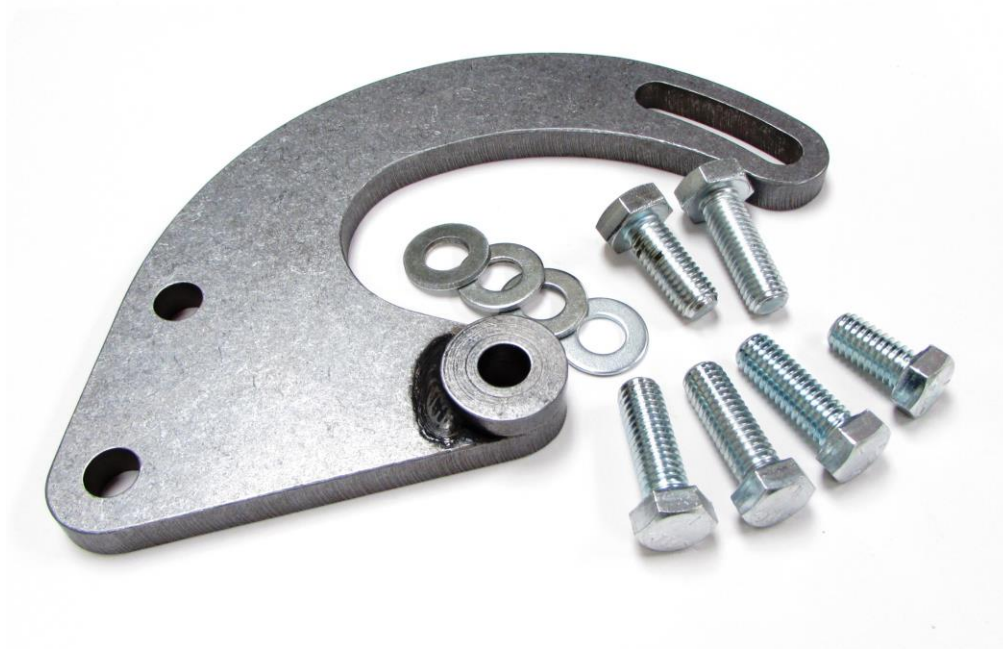

****Note:** Bracket is intended for use with Saginaw self-contained power steering pumps with two mounting locations on the back or the reservoir. Contains bolts for both metric and SAE threaded pumps.

- 1) If equipped, remove the two mounting studs from the back of the P/S pump.
- 2) Attach the P/S bracket to the back of the pump with the proper two $\frac{3}{4}$ " bolts and flat washers.
- 1) Install pump and bracket to the engine block with two $\frac{7}{16}$ " X 1-1/2" bolts and lock washers.

Borgeson Universal Co., Inc.
9 Krieger Dr. Travelers Rest, SC 29690
www.borgeson.com

9/4/15